

---

# KinderBike®

**E Series**  
**OWNER'S**  
**MANUAL**



**2014 - 2015**


---


---

## Thank You!


We are pleased you have chosen KinderBike for assistance in your child's balance training. Your trainer has been designed to get your child riding safely and quickly. In doing so, your child will develop the critical motor skills of balance and agility. Before assembling your child's trainer, it is essential that you read this owner's manual fully. In doing so you will fully understand the trainer's capabilities, as well as some safety concerns inherent to bicycle riding.


KinderBike recommends that all bike assembly, tuning and repairs be performed by a qualified bicycle technician. If you are ever unsure, please seek the assistance of a qualified professional.


 **AN IMPORTANT MESSAGE TO PARENTS:** This manual contains important safety information. For your child's safety, it is your responsibility that you (the caregiver) review this information with your child and make sure that your child understands all warnings, cautions, instructions and safety concerns. KinderBike recommends that you periodically inspect and maintain your child's trainer to insure their continued safety.


 **GENERAL WARNING:** LIKE ANY OTHER TOY VEHICLE, USING A TRAINING BIKE CAN BE A DANGEROUS ACTIVITY AND MAY RESULT IN INJURY OR DEATH EVEN WHEN USED WITH PROPER SAFETY PRECAUTIONS. USE AT YOUR OWN RISK AND USE COMMON SENSE.

- Always wear approved proper protective equipment, such as an ANSI, SNELL, CPSC or ASTM approved helmet. Long sleeve shirt and pants are recommended. The rider should wear athletic shoes (lace-up shoes with rubber soles). NEVER ride barefoot.. Keep shoelaces tied and out of the way of the wheels.
- NEVER ride in traffic or on the street and watch surroundings for pedestrians, bikes, and moving vehicles. Use the trainer in areas free from hazards, such as poles, fire hydrants, curbs, parked cars and traffic. The trainer should only be ridden on flat, level surfaces that are free of obstructions, bumps, sand, gravel, water, ice and other debris.

 **WARNING:** ALWAYS INSPECT TRAINER PRIOR TO RIDING. Properly inspecting and maintaining your trainer can reduce the risk of injury.

 **WARNING:** REGARDING THE USE OF NON-KINDERBIKE PRODUCTS WITH YOUR KINDERBIKE TRAINER.. Your trainer has been built to KinderBike's design specifications. All original equipment supplied at the time of sale were chosen on the basis of their compatibility with the frame, fork and all other components. Certain after-market products may or may not be compatible with your KinderBike trainer. Please consult your retailer or contact KinderBike prior to modifying or replacing any component with a non-factory specified component.

 **WARNING:** CHECK LOCAL LAWS REGARDING RIDE-ON TOY USAGE. Check local laws and regulations to see where and how you may use your KinderBike trainer legally. In certain municipalities, ordinances require riders to wear a helmet. Check local laws and regulations regarding helmet usage and ride-on toy operation for the area you intend to use the trainer.

 **CAUTION:** The trainer's primary stopping method is via the child's feet. Ensure your child understands how to stop with his/her feet before riding. Ensure tires are inflated to the specified pressure before operating. The KinderBike trainer is a child's ride-on toy and should not be used by adults or children in excess of 75lbs (34kg). Ages 3+

---




## Inventory - Parts List

### COMPONENTS - INSTALLED

Qty	Part Name
1	Main frame assembly (A)
2	Main frame headset
1	Saddle with saddle post
2	Hand grip
1	Rear Wheel Assembly w/hook ring and outer nut (two each)
2	Quick-release collar (one saddle, one handlebar)

### COMPONENTS - NOT INSTALLED

Qty	Part Name
1	Handlebar assembly (C)
1	Front fork and wheel assembly (B)

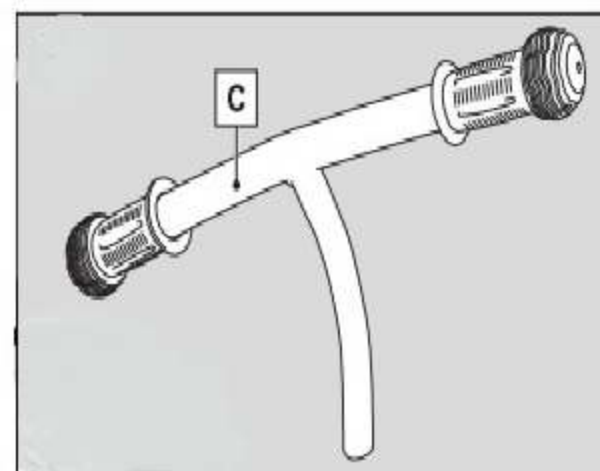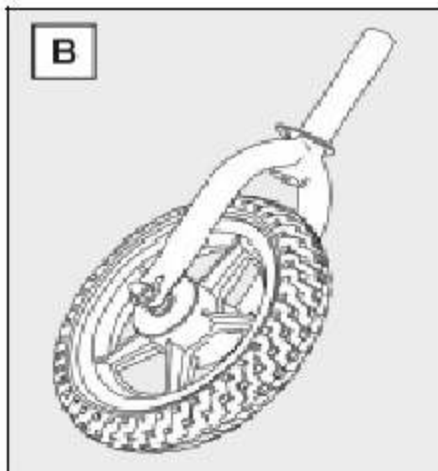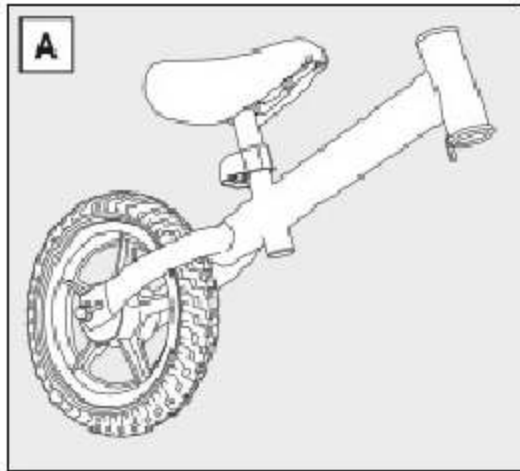

---

## ASSEMBLY

**Step 1:** Remove contents from box & inventory. Remove all packaging material from the trainer and discard

**Step 2** Install the two, black plastic head set bushings (**G**) onto each end of head tube – **Figure 1**

*Note: In some instances, the head set bushings may already be installed on the head tube*

**Step 3:** Insert front fork assembly(**B**) through main frame(**A**) head tube – **Figures 1, 2**

**Step 4:** Install quick-release collar (**E**) onto top section of front fork assembly - **Figures 2, 3**

**Step 5:** Insert handlebar assembly (**C**) into previously installed front fork assembly (**B**) – **Figure 2**

**Step 6:** Tighten safety screw (**G**) on collar (**E**) into handlebar alignment channel (**H**) – **Figure 3**

**Step 7:** Adjust handlebar to desired height and position, then tighten by closing quick-release collar arm (**J**) – **Figure 3**

*Note: When securing handlebar, ensure the minimum insertion line is not visible. Failure to adequately insert handlebar into trainer may pose a serious safety hazard.*

**Step 8:** Adjust saddle height as desired and securely tighten quick-release collar.



*Note: When securing saddle, ensure the minimum insertion line is not visible. Failure to adequately insert saddle into trainer may pose a serious safety hazard*

*Note: Your child's feet should touch the ground, with a slight bend at the knees.*

**Step 9:** Ensure all trainer hardware is tightened securely before each use.

**Step 10:** Adjust your child's helmet so that it is secure and snug. Never let your child ride without an approved bicycle helmet.

---

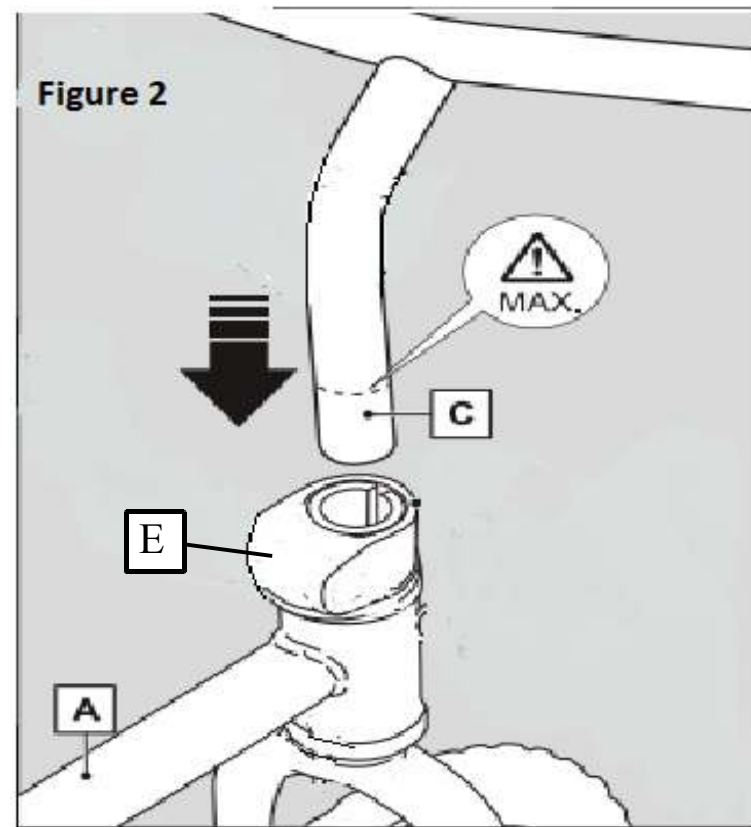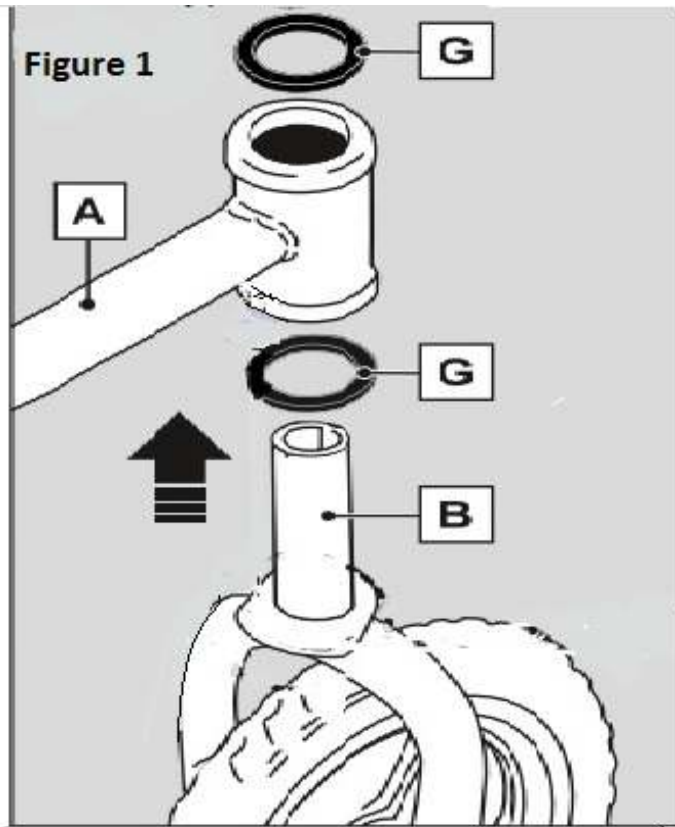

**Figure 3**



---

## KINDERBIKE LIMITED WARRANTY

KinderBike warrants each new frame, fork and original part against breakage due to defects in workmanship and materials:

**LIFETIME** • The trainer frame

**1 YEAR** • All original parts

### **THIS WARRANTY DOES NOT COVER:**

- Normal wear and tear
- Any damage, failure or loss caused by use of trainer for jumping, stunt riding, acrobatics or other similar activities, or in any other manner for which it was not designed
- Improper assembly or maintenance
- Any damage, failure or loss caused by accident, misuse, neglect, abuse, theft, or failure to follow instructions or warnings in owners manual

This warranty is expressly limited to the repair or replacement of a defective item and is the sole remedy of the warranty. This warranty extends from the date of purchase, applies only to the original owner, and is not transferable. Product unique serial number should be registered with KinderBike within sixty days of receipt by customer to activate warranty. KinderBike shall in no event be liable for incidental or consequential losses, damages or expenses in connection with its products. KinderBike's liability hereunder is expressly limited to the replacement of goods or parts not complying with this warranty or, at KinderBike's election, to the repayment of an amount equal to the purchase price of the product in question. You are responsible for return shipping costs, as well as products lost or damaged during transport to us. Proof of purchase is required with all warranty returns. Proof of purchase may be in the form of a receipt or bill of sale and must include the model number, purchasers information, retailer information and date of sale. This warranty does not cover damage to normal wear and tear parts to include tubes, tires, hand grips, brake components, padding, saddle cover or bearings. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you.

---



**For Service or Warranty Inquiries:**

KinderBike, North America  
18121-C E. Hampden Ave #173  
Aurora, CO 80013 USA  
Ph: (888) 666-9310  
E: [support@kinderbikeusa.com](mailto:support@kinderbikeusa.com)  
web: [www.kinderbikeusa.com](http://www.kinderbikeusa.com)

© 2014 KinderBike, Ltd

All rights reserved

The KinderBike logo is a registered trademark of KinderBike Worldwide

---